



Cat. No. 40-992

8-Terminal Speaker Wall Plate

PARTS

Flat mounting brackets (2)
Formed mounting brackets (2)
Mounting bracket screws (4)
Screws (2)

CHOOSING A MOUNTING LOCATION

Choose a location for the wall plate where:

- Either wiring exists, or you can easily run wire through partition(s)/wall(s) to the location.
- The location does not interfere with electrical wiring or parts of the house frame behind the wall.

INSTALLATION

You can mount your 8-Terminal Speaker Wall Plate using a standard electrical box or the supplied mounting brackets.

Mounting with a Standard Electrical Box

Note: To avoid possible damage to speaker systems when connecting speaker wires to the + and – terminal holes, be sure not to let any strands from the positive and negative wires touch each other.

1. Turn the eight screw terminal sleeves on the back of the wall plate counterclockwise to expose the terminal holes.
2. Insert the right/left positive (+) speaker wires into the terminal hole on the right/left screw terminal with the red stripe, then turn the sleeve clockwise to secure the wires.

(illus -- improve; show facing view, not cross-section)

3. Insert the right/left negative (–) speaker wires into the terminal hole on the right/left screw terminal with the black stripe, then turn the sleeve clockwise to secure the wires.

4. Thread the two supplied short screws through the screw holes in the speaker wall plate and the electrical box, then tighten the screws.

nals with the black stripe, then turn the sleeves clockwise to secure the wires.

Mounting with Wall Brackets

1. Draw a rectangle 4 inches long \times $1\frac{3}{4}$ inches wide (10.2 \times 4.4 cm) on the wall or partition.
2. Drill a $\frac{3}{8}$ -inch (1 cm) hole in one corner of the rectangle.

5. Turn the eight screw terminal sleeves on the front of the wall plate counterclockwise to expose the terminal holes.

 
6. Insert the speaker's right/left positive (+) wires into the terminals holes on the right/left screw terminal with the red stripe, then turn the sleeves clockwise to secure the wires.

3. Insert a saber saw or keyhole saw in the hole and cut along the outline, then remove the cut-out portion.

4. Run wiring from the source through the wall and feed it through the cut opening.

5. Turn the eight screw terminal sleeves on the back of the wall plate counterclockwise to expose the terminal holes.

7. Insert the speaker's right/left negative (–) wires into the terminal holes on the right/left screw terminal



6. Insert the right/left positive (+) speaker wires into the terminal holes on the right/left screw terminals with the red stripe, then turn the sleeves clockwise to secure the wires.

9. Position the brackets at an angle in the cut opening with the formed strip in front, then level them with their center holes the same distance apart as the screw holes on the wall plate.

10. Thread the two supplied short screws through the screw holes in the wall plate and the mounting bracket, then tighten the screws.

11. Turn the eight screw terminal sleeves on the front of the wall plate counterclockwise to expose the terminal holes.

7. Insert the right/left negative (–) speaker wires into the terminal holes on the right/left screw terminals with the black stripe, then turn the sleeves clockwise to secure the wires.

12. Insert the speaker's right/left positive (+) wires into the terminal holes on the right/left screw terminals with the red stripe, then turn the sleeves clockwise to secure the wires.

8. Assemble the two mounting brackets (formed and flat strips) using the supplied mounting bracket screws.

illus as in
40-982

13. Insert the speaker's right/left negative (–) wires into the terminal holes on the right/left screw terminals with the black stripe, then turn the sleeves clockwise to secure the wires.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600, Fort Worth, TX 76102

We Service What We Sell

3/97

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

02A99

Printed in Taiwan